

# USER MANUAL

## CE29416

ALCATEL

 
### INTRODUCTION

Your telephone is designed to give you flexibility in use, and high quality performance. To get the most from your new telephone, we suggest that you take a few minutes right now to read through this User Manual.

If you have any questions or problems, consult the Troubleshooting Tips for the solution.

### PARTS CHECKLIST

Your package should contain the following items:

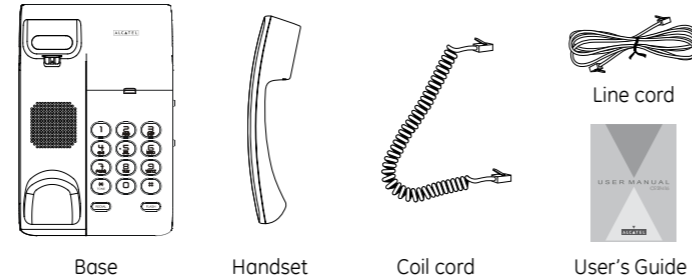


### INSTALLATION AND SETUP

You telephone can be mounted on the wall or placed on a table.

#### BEFORE YOU BEGIN


##### MODULAR JACK REQUIREMENTS

You need a RJ11C type modular jack, which is the most common type of phone jack and might look like one pictured here. If you don't have a modular jack, call your local phone company to find out how to get one installed.

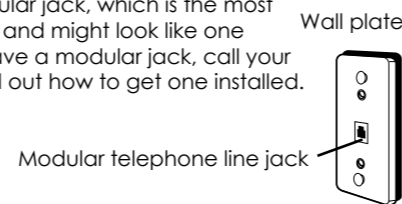


#### DESKTOP INSTALLATION

 
1. Adjust the **RINGER** volume switch to the desired setting.

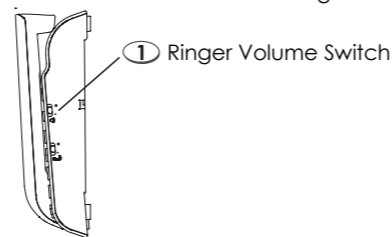

 2. Set the **PULSE/TONE** switch to **TONE** if you use Touch-Tone Service; Set it to **PULSE** if you have rotary service.

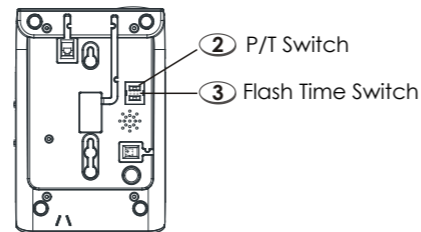

 3. Set the **Flash time** switch (600ms, 300ms, 100ms) to the appropriate setting.  
4. Plug the coil cord into the handset, and into the telephone jack on the bottom of the unit.

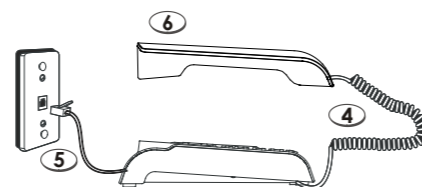


5. Plug the telephone line cord into a modular jack (RJ11C) and into the **LINE** jack on the base of the unit.  
6. Place the handset to base cradle.


### WALL MOUNT INSTALLATION

 The telephone can be mounted on a wall phone plate (not included).


1. Rotate the wall mounting knob as the following layout.

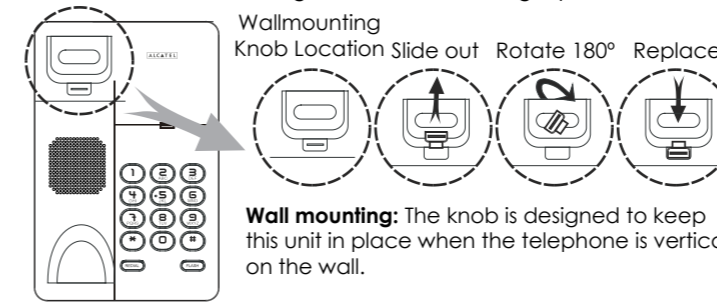

 2. Plug the line cord into the phone jack on the bottom of the unit.

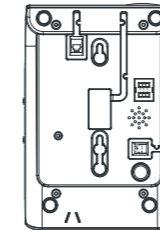


 3. Connect the line cord to the modular jack on the wall.

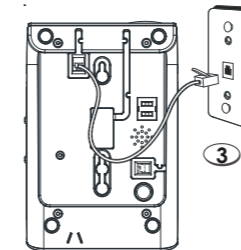

4. Place the base to the wall mount plate.

 5. Plug the coil cord into the handset and into the unit, and then hang up the phone.

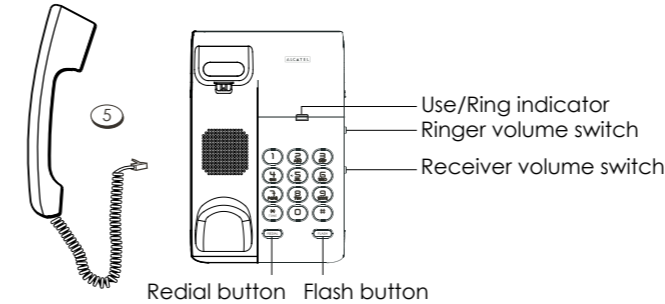

### USING FEATURES

#### MAKING A CALL

1. Lift the handset and wait for a dial tone.  
2. Dial the telephone number using the keypad.

#### RECEIVING A CALL

Lift the handset to answer the call.

#### RINGER VOLUME CONTROL

Use the **RINGER** volume switch to adjust the volume of the ringer.

#### RECEIVER VOLUME CONTROL

Use the **RECEIVER** volume switch to adjust the **RECEIVER** volume level to HI or Low during conversation.

#### FLASH BUTTON

Press the **FLASH** button to activate customer calling services such as call waiting or call transfer, which are provided by your local phone company.

#### REDIAL BUTTON

Redial the last number you called by pressing the **REDIAL** button after you get a dial tone. Maximum digit of redial is 32.

### TROUBLESHOOTING TIPS

PROBLEM	SOLUTION
No dial tone Can't dial out	<ul style="list-style-type: none"> <li>Check hook switch to make sure it pops up.</li> <li>Make sure <b>TONE/PULSE</b> is set to correct position.</li> <li>Unplug the phone, wait 30 seconds, and plug the phone back in.</li> </ul>
Phone doesn't ring	<ul style="list-style-type: none"> <li>Check phone line cord.</li> <li>Could have too many phones on one line.</li> </ul>

### CARE AND MAINTENANCE

To keep your phone working and looking good, please follow these guidelines:

- Avoid putting near heating appliances and devices that generate electrical noise (for example, motors and fluorescent lamps).
- DO NOT expose to direct sunlight or moisture.
- Avoid dropping and other rough treatment of the unit.
- Never use a strong cleaning agent or abrasive powder because this will damage the finish.
- Retain the original package in case you need to return is at a later date.



Used equipment must be disposed of in compliance with current environmental protection regulations. You should return it to your reseller or dispose of it in an approved recycling centre.

"WEEE" Weight: 0.47Kg

THOMSON  
images & beyond



#### DECLARATION OF CONFORMITY

According to the disposition of the directive 1999/5/EC of the European parliament and of the council of 9 March 1999 on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity.

We

Thomson Telecom  
46, quai A. Le Gallo  
92648 Boulogne Cedex  
France

declare under our sole responsibility that the product Alcatel CE29416 1-A

to which this declaration relates is in conformity with the following standard(s) or other normative document(s) provided that it is installed, maintained and used in the application for which it is made, with respect of the "professional practices" relevant installation standards and manufacturer's instructions :

- EN 60950-1 (2006)
- EN 55022 (2006)
- EN 55024 (1998) + A1 (2001) + A2 (2003)

Boulogne, November 27, 2008

Didier GOUJARD  
Market Development Director, CNS Europe, Middle East and Africa